



CHEESE CUP WARMER INSTRUCTIONS

1. Turn the power switch to “II” for high warmer settings to warm cheese cups.
2. Pre-heat the unit for approximately one hour.
3. When the temperature of the cheese cups reaches between 125°F and 140°F turn the power switch to the “I” setting.