



COTTON CANDY INSTRUCTIONS

1. Turn on main switch and heat switch.
2. Leave the heat control knob where it is set.
3. Allow machine to heat for 20 seconds before adding Flosssugar.
4. Hold an inch or two of the pointed end of the cone between two fingers and a thumb and follow procedure.

